


FULLY TRANSPARENT DUAL STAGE OVERDRIVE AND BOOST PEDAL. TRANSITION SEAMLESSLY FROM A TRANSPARENT, CLEAN Or driven sound to a blistering, fat overdrive lead. Experience a range from thick, fuzz-like drives to glassy tibe-like tones and everything in retween

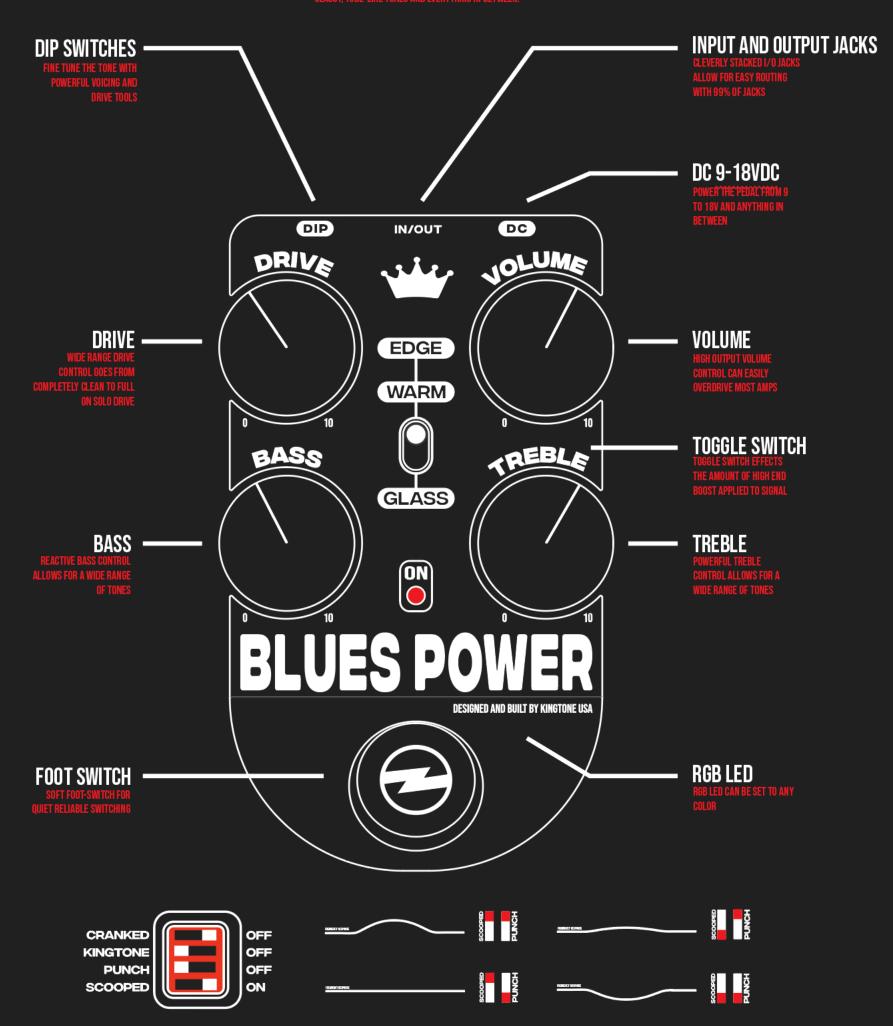

CRANKED BOOSTS THE SECOND OVERDRIVE STAGE TO GIVE A CRANKED AMP TYPE OF TONE KINGTONE CHANGES THE OVERALL VOICING OF THE PEDAL TO PROVIDE MORE BITE AND FATNESS PUNCH & SCOOPED CONTROL THE MID RANGE OF THE PEDAL

POWER ON STAT

1. POWER DOWN THE PEDAL AND HOLD FOOT-SWITCH
2. POWER ON PEDAL UNTIL LED TURNS RED RELEASE FOOT-SWITCH
THE PEDAL WILL NOW START WITH THE EFFECT TURNED ON
REPEAT THE PROCESS TO REVERSE IT

NEFEALLINE FOULS TO NEVERSE IT

USE THE POWER STATE TO CHOOSE IF YOUR PEDAL STARTS POWERED ON
OR STARTS POWERED OFF THIS IS USEFUL FOR PEDAL-ROARDS AND PEDALS IN RACKS

LED COLOR

- 1. POWER DOWN THE PEDAL AND HOLD FOOT-SWITCH
- 2. POWER ON PEDAL UNTIL LED TURNS BLUE RELEASE FOOT-SWITCH
- 3. SCROLL THROUGH COLORS BY TAPPING FOOT-SWITCH
- 4. HOLD FOOT-SWITCH TO SAVE

LED COLOR SEQUENCE RGB-BRIGHT - RGB-DIM - WHITE WARM > WHITE COLD